

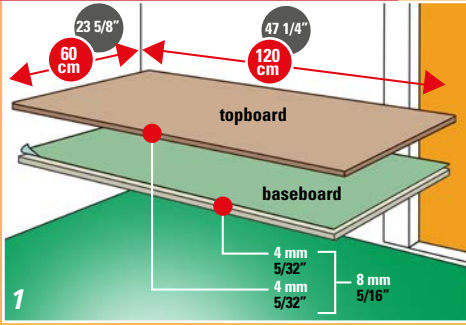
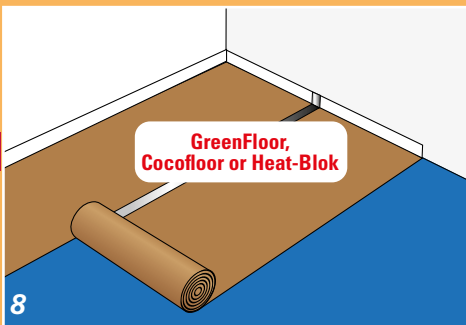
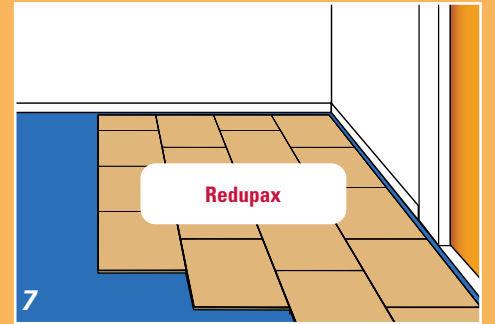
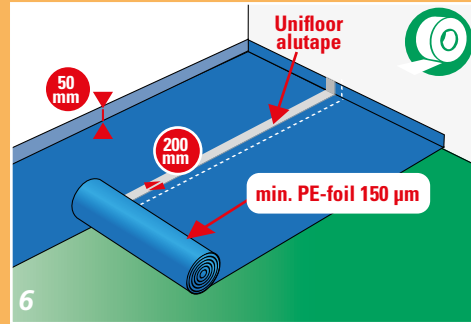
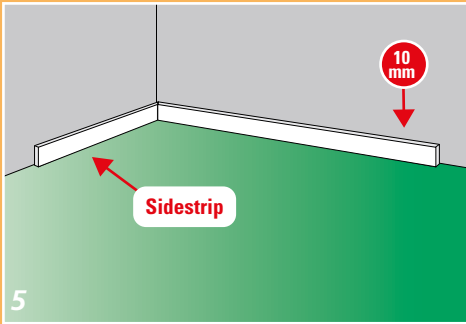
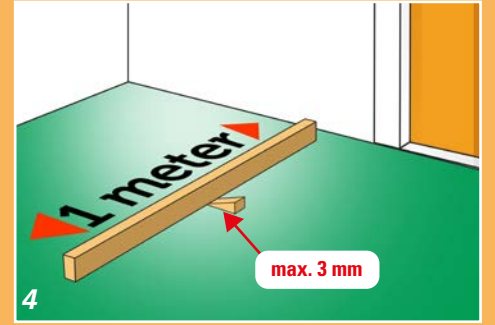


# FITTING INSTRUCTIONS













## FLOOR PREPARATION

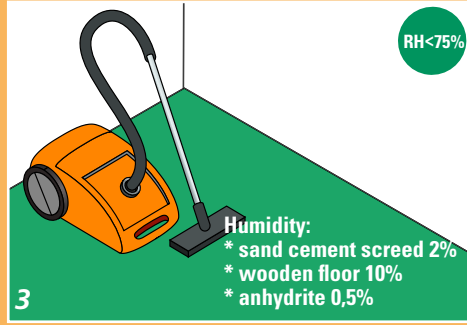



## ACCLIMATIZE 24 HOURS IN ADVANCE

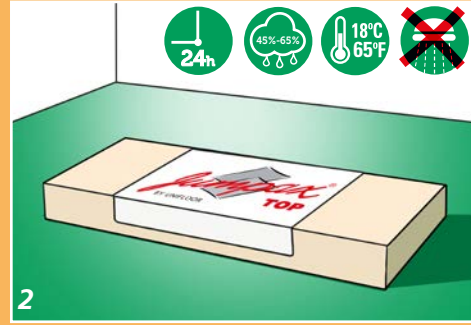

## FITTING INSTRUCTIONS

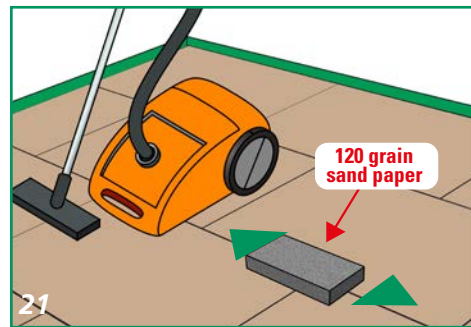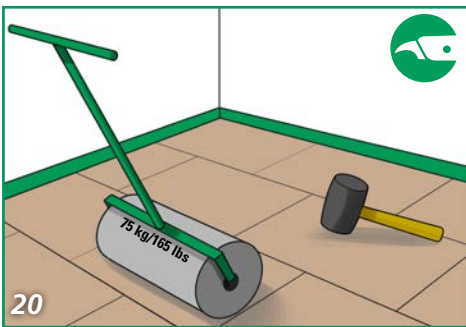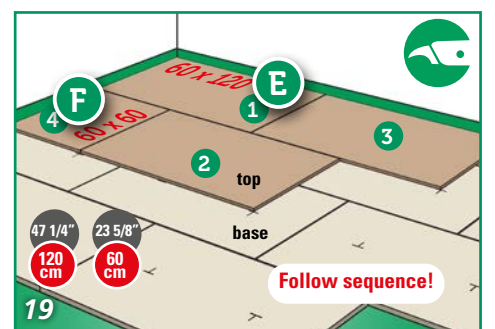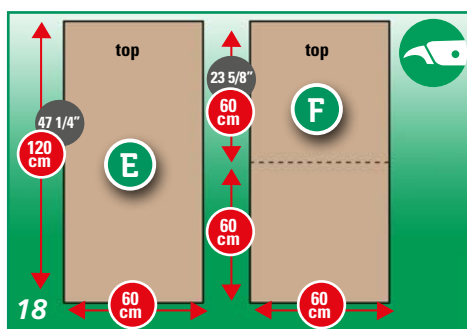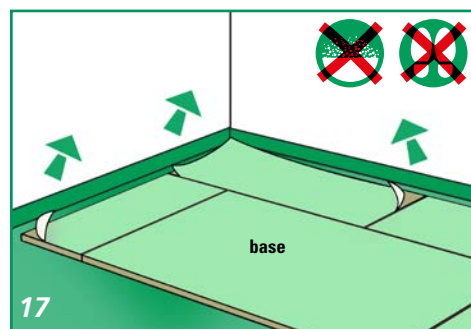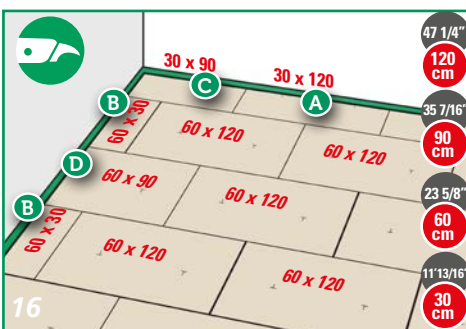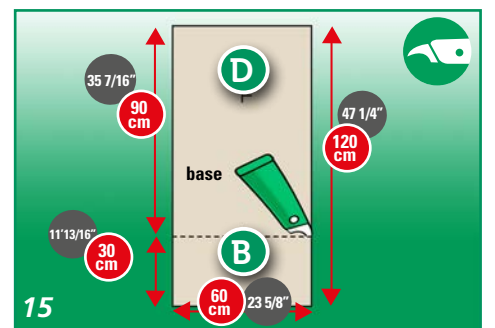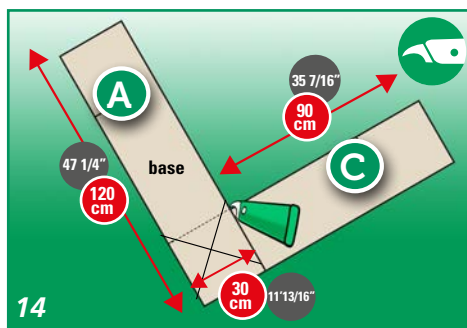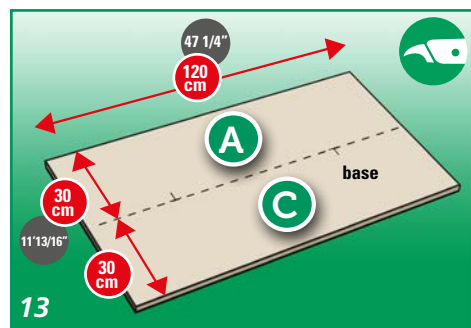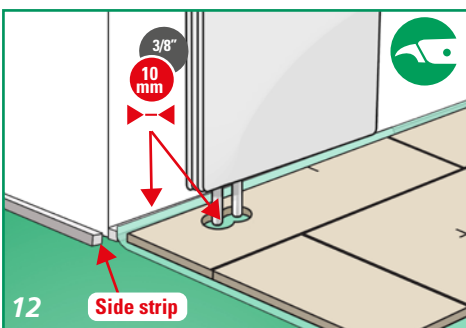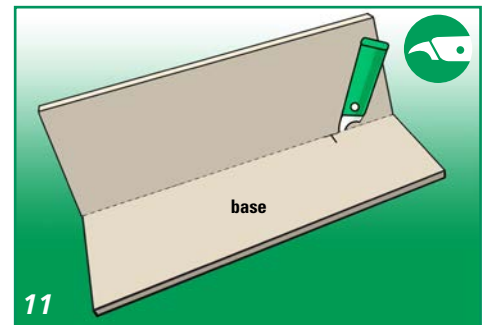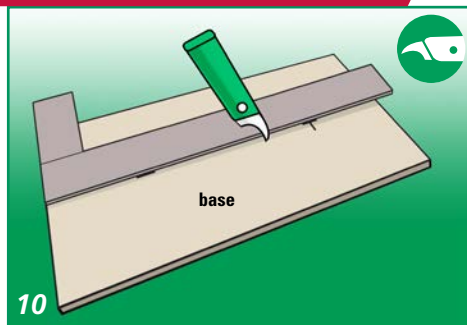

## FINISHING

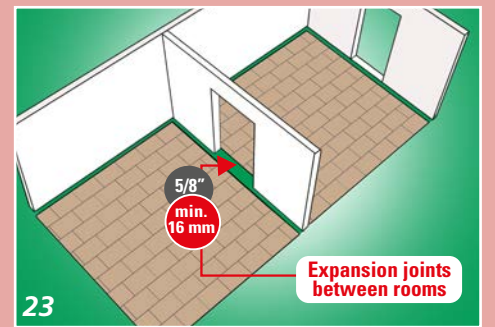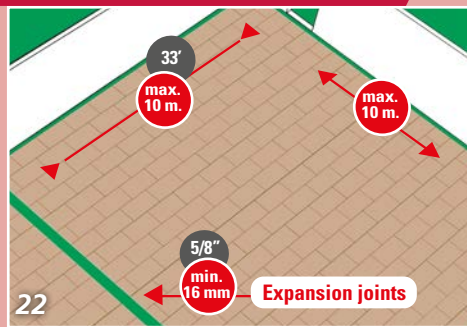

## PLACE FLOORCOVERING WITHIN 48 HOURS

